

Aero Design Ltd.**Work Order Control Sheet**Work Order#: 2016-92 Date Opened: 05 July 2016 Title: FabricationAircraft OEM: Robinson Aircraft Model: R44 Product Type: Cargo Basket and lid Product Model: RH Standard Quantity: 3**Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
Additional Work Sheets (Standard Practice)
Drawings (See List Below)
Parts Distribution Sheet
Sub Component Tags
Completed Certification (Original)
Time Sheet (R&D)
Notes

Initial or N/A

DB
N/A
DB
DB
N/A JC
JC
N/A
N/A

Build Sheet Contents

Tasks Initialled
Dual Inspections Initialled

Initial or N/A

JC
JC

Drawing List

Drawing #	Rev #	Description	Initial or N/A
90611	1	Body	DB
90612	1	Lid	DB
90621	1	Aft Attach hoop	DB
90622	1	Forward Attach hoop	DB
49210	2	Hoop	DB
84262	2	Basket Handle Prov.	DB
94263	0	Lid Handle Prov.	DB

Traveller

Initial or N/A

Component Completion

Quantity Complete on This Work Order
Quantity Incomplete on This Work Order
Further Processing Required Before Release
Release to Stock as Components

As Instructed

3
N/A
N/A
N/A

Certification

Form One Completed
Serviceable (Green) Tag Completed
In Process (Yellow) Tag Completed
Unserviceable (Red) Tag Completed
Parts Tracking (White) Tag Completed
Parts Placed in Stores for Distribution

Initial or N/A

N/A
JC
JC
N/A
N/A
JC

Additional Documentation

Documentation of a minor change
Non-Conformance Report Required
Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
Research and Development
Third Party

Initial or N/A

JC
N/A
N/A

Work performed by:

Print: D. BartfaiSign: D. BartfaiSCA: AD07Date: 29-Mar-17

ICC / Dual Inspection performed by:

Print: J. ClarkeSign: J. ClarkeSCA: AD02Date: 30-Mar-17

Work Order closed by:

Print: J. ClarkeSign: J. ClarkeSCA: AD02Date: 28 May 17

Approved Manufacturing Facility 73-04

Form 20.0.03

Rev. Original 23 Sep 2014



Aero Design Ltd.

AMF 73-04

9888 A Malaspina Rd.

Powell River, BC

Canada

V8A 0G3

Complete Fabrication Instructions

This sheet is designed to assist in the fabrication of Aero Design products in accordance with the company Manufacturing Policy Manual, the Canadian Aviation Regulations and other applicable technical documentation.

The reference column of the following table is for reference unless a specific instruction is called out.

The initial columns serve one column per component fabricated on the applicable work order.

Nomenclature: AS350 Quick Release Cargo Basket Hoop Work Order #: 2016-92
Number of Units: 3

Model	Requirements	Reference	Initial					
AS350	Review LOEP to ensure most current technical specifications	N/A	DB	DB	DB			
AS350	Cut a piece of material to 48 3/16" <u>48 1/8"</u> <u>90° both ends</u>	N/A	DB	DB	DB			
AS350	Cut one end at 90 degrees and the opposite end at 16 degrees.	N/A						
AS350	At the 90 degree end measure <u>12.5</u> and mark. Bend at that mark, set stop at 103 deg. <u>10 13/16" both ends</u>	N/A	DB	DB	DB			
AS350	At the longest point of the 16 degree end measure 14 1/4" and mark. Bend at that mark, set stop at 85 deg.	N/A						



Post Fabrication Inspection

Inspect components to ensure conformity to the applicable design data.



Signature: [Signature]
Licence Number or SCA: 21 MAR 2017 JC ADO2
Date: 29 MAR 2017

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE - CREATED FROM 84262 REV. 1	BJC	14/02/2014

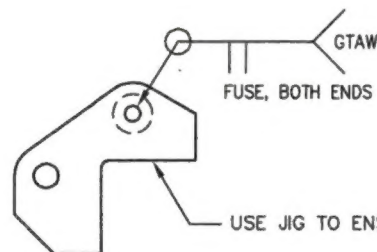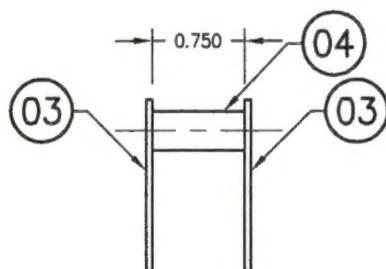

02 HANDLE BRACKET ASSEMBLY

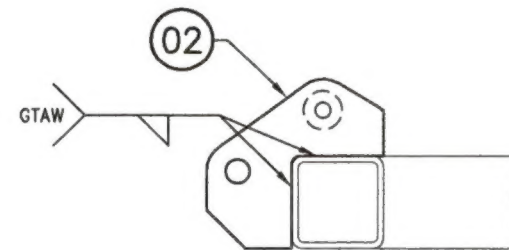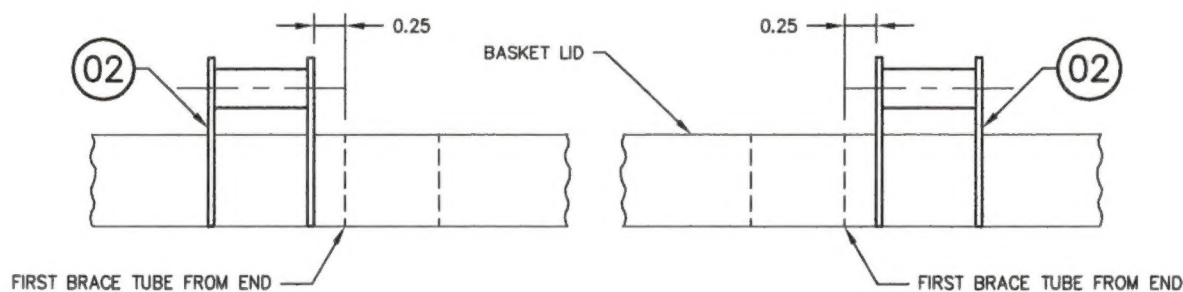

01 LID HANDLE PROVISIONS ASSEMBLY

NOTES:

1. REMOVE ALL BURRS AND SHARP EDGES.
2. WELDING TO BE COMPLETED BY GTAW METHOD TO AMS2685C USING ROD CONFORMING TO ER308L OR EQUIVALENT.

1		36275-02	04	SUPPORT
2		36273-01	03	LID BRACKET
	2	84263-02	02	HANDLE BRACKET ASSEMBLY
		84263-01	01	LID HANDLE PROVISIONS ASSY
02	01	PART NO.	ITEM	DESCRIPTION
QTY	QTY	LIST OF MATERIALS		

APPROVALS	DATE
DRAWN: JEFF CLARKE	14 FEB 2014
CHECKED: JASON REKVE	

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ±0.010 ±1/2°
X.XX ±0.03
X.X ±0.1



AERO DESIGN LTD.


9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.683.8276 www.aerodesign.ca

HELICOPTER CARGO BASKET
LID HANDLE PROVISIONS ASSEMBLY

SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A3	84263	0

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR ABUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE - CREATED FROM 36262	BJC	03/11/2009
1	CHANGE LOCATION OF BUSHINGS	BJC	29/09/2011
2	UPDATED TITLE BLOCK, MOVE LID PROVISIONS TO 84263	BJC	14/02/2014

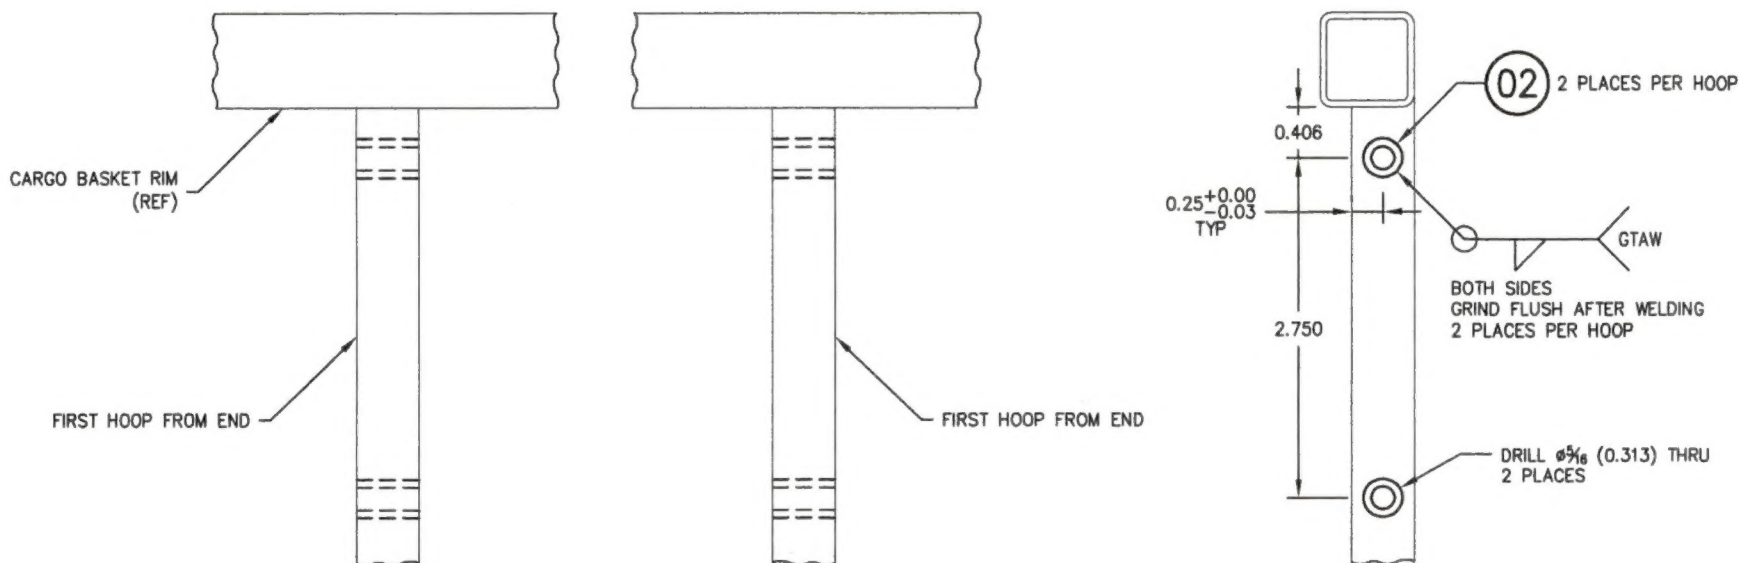

01 BASKET HANDLE PROVISIONS ASSEMBLY PROVISIONS TO BE INSTALLED IN HOOPS BEFORE ASSEMBLY TO BASKET RIM

NOTES:

1. REMOVE ALL BURRS AND SHARP EDGES.
2. WELDING TO BE COMPLETED BY GTAW METHOD TO AMS2685C USING ROD CONFORMING TO ER70S-2 OR EQUIVALENT.

4	84272-01	02	BUSHING
	84262-01	01	BASKET HANDLE PROV. ASSY
01	PART NO.	ITEM	DESCRIPTION
QTY	LIST OF MATERIALS		

APPROVALS	DATE
DRAWN: JEFF CLARKE	03 NOV 2009
CHECKED: E. BURGAIN	

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ±0.010 ±1/2°
X.XX ±0.03
X.X ±0.1



AERO DESIGN LTD.

9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.468.2376 www.aerodesign.ca

HELICOPTER CARGO BASKET
BASKET HANDLE PROVISIONS ASSEMBLY

SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A3	84262	2



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

Nomenclature: R44 Basket Body R14 AMF 73-04
No. of pieces: 1
Manufacturer: Aero Design Ltd.
Part No.: 90611-01 Serial/Batch No.: NA
TTSN: NA TSO: NA Rem.: NA
Work Order No.: 2016-92-2
Remaining Tasks to be Performed: Prep for powder, powder
coat.

Signature: David Martin
Date: March 8/2017 Lic. No. / SCA AD-05

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

In Process

Remarks

INSPECTED 30 MAR 2017 JC

Received from powder coat 06 APR 2017 JC

GREEN TAG ISSUED



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

Nomenclature: R44 basket lid ^{RH} AMF 73-04 No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 90612-01 Serial/Batch No.: NA

TTSN: NA TSO: NA Rem.: NA

Work Order No.: 2016-92-03

Remaining Tasks to be Performed: Prep for powder, ✓
powder coat. ✓

Signature: David Martin

Date: March 9/2017 Lic. No. / SCA AD-05

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

In Process

Remarks

Insp for powder OK 30 Mar 17

Received from powder coat 06 APR 2017 J.
GREEN TAG ISSUED



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

RH

AMF 73-04

Nomenclature: R44 basket body No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 90611-01 Serial/Batch No.: NA

TTSN: NA TSO: NA Rem.: NA

Work Order No.: 2016-92-1

Remaining Tasks to be Performed: Prep for powder coat, ✓
powder coat.

Signature: David M...

Date: March 7/2017 Lic. No. / SCA AD-05

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

In Process

Remarks

Inspected 30 MAR 2017 JC.



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

Nomenclature: R44 basket body ^{RH} AMF 73-04 No. of pieces: 1
Manufacturer: Aero Design Ltd.
Part No.: 90611-01 Serial/Batch No.: NA
TTSN: NA TSO: NA Rem.: NA
Work Order No.: 2016-92-03
Remaining Tasks to be Performed: Prep for powder, powder coat.

Signature: David Martin
Date: March 8/2017 Lic. No. / SCA AD-05

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

In Process

Remarks

INSPECTED *29* 30 MAR 2017 *JK*



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

RH

AMF 73-04

Nomenclature: R44 basket lid No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 90612-01 Serial/Batch No.: NA

TTSN: NA TSO: NA Rem.: NA

Work Order No.: 2016-92-01

Remaining Tasks to be Performed: Prep for powder, powder coat.

Signature: [Signature]

Date: March 9/2017 Lic. No. / SCA AD-05

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

In Process

Remarks

Insp for powder OK 30 Mar 17



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 1

PN: 90622-01 -01

Aircraft: Robinson

Model: R44

Description: Forward Attach Hoop RH JC.

Supplier: Aero Design

Color: N/A

WO#: 2013-47

PO# N/A



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 1

PN: 90621-01-01

Aircraft: Robinson

Model: R44

Description: Aft Mount Hoop, RH

Supplier: Aero Design

Color: N/A

WO#: 2013-47

PO# N/A



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

Nomenclature: R44 basket lid RH AMF 73-04
No. of pieces: 1
Manufacturer: Aero Design Ltd.
Part No.: 90612-01 Serial/Batch No.: NA
TTSN: NA TSO: NA Rem.: NA
Work Order No.: 2016-92-02
Remaining Tasks to be Performed: Prep for powder, powder
coat.

Signature: David Martin
Date: March 9/2017 Lic. No. / SCA AD-05

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

In Process

Remarks

Insp for powder 30 Mar 17 dk



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:

1

PN:

90622-01 -01

Aircraft:

Robinson

Description:

Forward Attach Hoop

RH GC.

Model: R44

Supplier:

Aero Design

Color:

N/A

WO#:

2013-47

PO# N/A



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 1

PN: 90621-01-01

Aircraft: Robinson

Model: R44

Description: Aft Mount Hoop, RH

Supplier: Aero Design

Color: N/A

WO#: 2013-47

PO# N/A



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 1

PN: 90612

Aircraft: Robinson

Model: R44

Description: Lid Rim

Supplier: Aero Design

Color: N/A

WO#: 2014-47

PO# N/A

2013 *ma*



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 1

PN: 90621-01-01

Aircraft: Robinson

Model: R44

Description: Aft Mount Hoop, RH

Supplier: Aero Design

Color: N/A

WO#: 2013-47

PO# N/A

$\times 3$ 


2. REMOVE ALL BURRS AND BREAK SHARP EDGES
3. PRIOR TO WELDING, DRILL 40 VENT HOLES IN ASSEMBLY FOR VENTING OF WELD GASES. WHEN ASSEMBLY IS COMPLETE, FILL ALL VENT HOLES WITH RESIN WELD
4. WELDING OF 4130 STEEL TO BE COMPLETE TO THE METHOD TO AMS 2480C 4130 AND 1018 STEEL. WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT
5. STAINLESS AND 4130 STEEL WELDING ROD SHALL CONFORM TO ER308L OR EQUIVALENT.
6. INSTALL ITEM 7 (HANDLE BRACKET ASSEMBLY) IN ACCORDANCE WITH AERO DESIGN LTD. DRAWING 84282 TYPE 2 PLACES
7. STRUT MEMBER ON FND END OF BASKET ONLY
8. THOROUGHLY CLEAN AND POWDER COAT BASKET SUB-ASSEMBLIES PRIOR TO ASSEMBLY.



SCALE 1:1
VIEW LOOKING AT FRONT END OF BANKET



SCALE 1 1

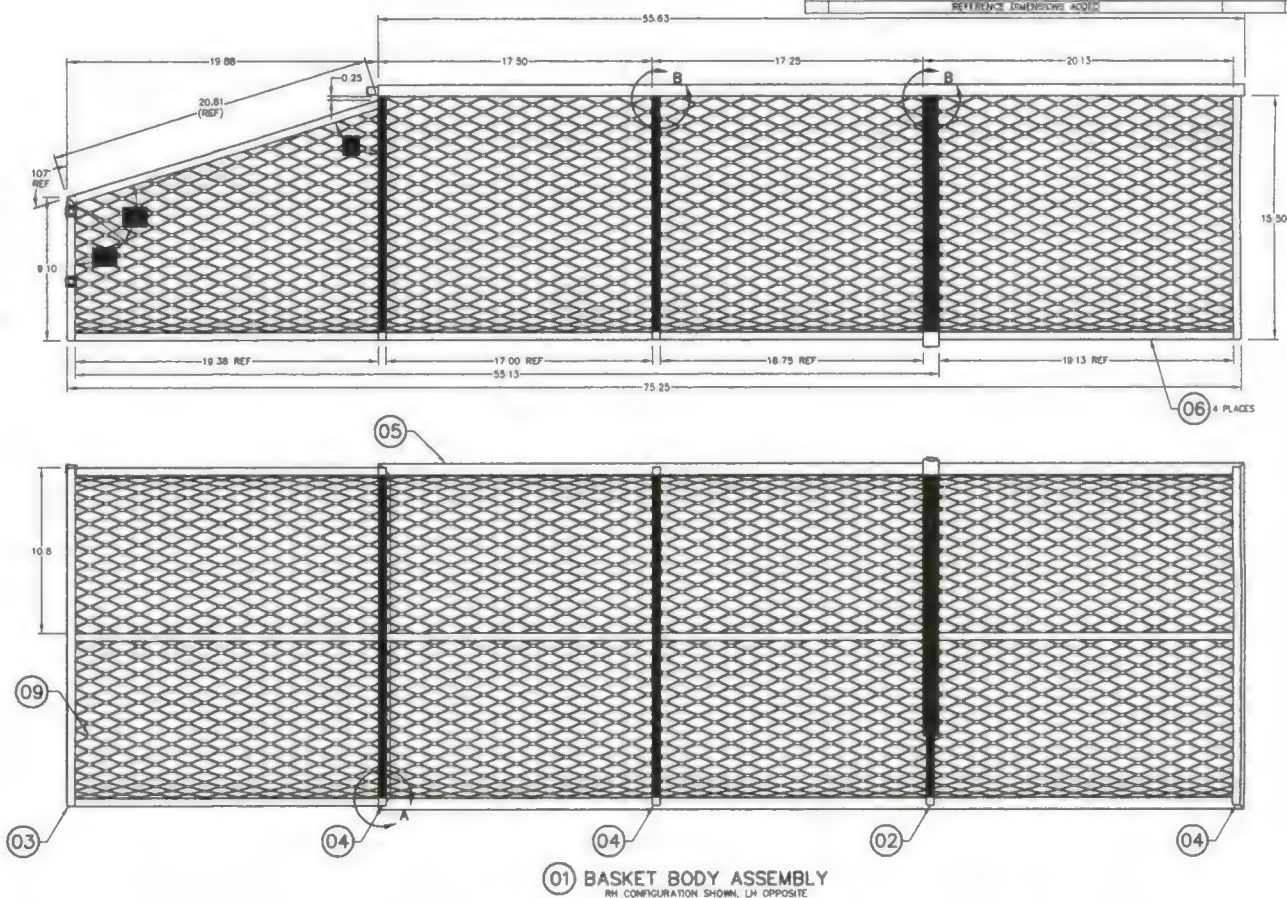

A/R/R/R		3/4-16F	09	MESH	STEEL	COMMERCIAL	
1	1	49215-01	08	SPACER			
1	1	B4262-01	07	BASKET HANDLE PROVISIONS ASSEMBLY			
A/R/A/R			08	TUBE	4130 STEEL, COND N	ML-1-6736	0.5 X 0.035 SOR, TUBE
A/R/A/R			05	TUBE	4130 STEEL, COND N	ML-1-6736	0.75 X 0.035 SOR, TUBE
3	3	49210-02	04	HOOP			
1	1	90622-01-02	03	FORWARD ATTACHMENT HOOP (LEFT HAND)			
1	1	90622-01-01	03	FORWARD ATTACHMENT HOOP (RIGHT HAND)			
1	1	90621-01-02	03	AFT ATTACHMENT HOOP (LEFT HAND)			
1	1	90621-01-01	02	AFT ATTACHMENT HOOP (RIGHT HAND)			
1	1	90611-01-02	01	BASKET BODY ASSEMBLY (LEFT HAND)			
1	1	90611-01-01	01	BASKET BODY ASSEMBLY (RIGHT HAND)			
-02	-01	PART NO	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
QTY	QTY	LIST OF MATERIALS					
		APPROVALS		DATE		 AERO DESIGN LTD. 9088A MALAYSIA ROAD POWELL RIVER, B.C. CANADA V8A 0G3 TEL: 604 685-3978 www.aerodesign.ca	
DESIGNED		JEFF CLARKE		03 SEPT 2010			
CHECKED		E. BURGON					
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON:							
DECIMALS		ANGLES					
X.XXX		±0.010		±1/2°			
X.XX		±0.03					
X.X		±0.1					
		SCALE 1 : 4		DWG SIZE		REV	
		SHEET 1 OF 1		A1		90611 1	

CARGO BASKET BODY FABRICATION - COMMON

R44 RH x 3

Complete
(initial or SCA #)

Work Order: 2016-92

Date Open: 05 JULY 2016

1. Rim Assembly – Basket Body

- Cut and fit $\frac{3}{4}$ " x 0.035 material to fit rim jig.
 - 1 or 2 lid prop bushing holes in short tube – refer to drawing
- Record material PO on attached material list.
- Remove writing on tubes with acetone and scotch bright.
- For extra large baskets – drill #30 (0.129) vent holes to vent stringer tubes into rims.
- 94611 (206L/407 XL ski) only – drill for 4 threaded bushings before assembling rim

2016-91

AD
73-04
05

AD
73-04
05

2. Weld Rim Assembly.

- Record welding rod PO on attached material list.
- 94611 (206L/407 XL ski) only – weld 4 threaded bushings into inboard rim tube.

2016-91

AD
73-04
05

AD
73-04
05

3. Inspection

- Rim for complete welds

2016-91

AD
73-04
05

AD
73-04
05

4. Frame assembly – body

- General
 - Vent holes shall be #30 (0.129), and located inside the structure wherever possible to allow venting of weld gasses through existing holes (i.e. lid prop bushing, hoops, etc.)
- Grind corner welds from step 2 on rim to allow hoops to sit flat.
- Pull required hoops from stock - standard, attachment, handle.
 - If hoops are not in stock see detailed procedure sheet for specific hoop fabrication.
 - Ensure vent hole is located at centre of tube to vent spine tubes.
- Assemble hoops with attachment lug locating jig and hoop spacing jig.
 - Ensure correct order and orientation of hoops. Refer to drawing.
 - Attachment lugs are on inboard side.
 - Handle bracket bushings are on outboard side, second hoop from both ends.
May be on attachment hoops.
 - Run 3/8-24 tap into attachment lugs to ensure clear threads.
 - Bolt attachment lug locating jig to attachment hoops with 3/8-24 bolts.
 - Attach inboard and outboard hoop spacing jigs to all hoops using 1" C-clamps. Raise jigs approximately 2" off table to allow room to weld around hoops.
 - Attach bottom (spine) jig to all hoops using 1" C-clamps along the centre line of the basket. Ensure jig is straight prior to tightening all clamps.
- Cut $\frac{1}{2}$ " x 0.035 material to fit spine jig.
- Cut $\frac{1}{2}$ " x 0.035 material for strut to fit from lower inboard attachment to upper outboard rim.
 - Refer to applicable drawing for position, not required on some baskets.
- Option: Cut $\frac{1}{2}$ " x 0.035 material for front end cutout. Record material PO on attached material list.
- 90611 (R44) only: Cut $\frac{1}{2}$ " x 0.035 material to fit front end structure. Record material PO on attached material list.
- Drill vent holes into attachment hoop and/or rim to vent strut(s) and front end cutout.

AD
73-04
05

AD
73-04
05

AD
73-04
05

- j. Record hoop WOs and material POs on attached material list.
- k. Remove writing on tubes with acetone and scotch bright.
- l. Insert rim assembly into jig and set frame assembly onto rim. Ensure correct orientation of lid prop bushings in rim to frame. Bushing hole must be closer to attachment side.
- m. Align hoops to rim in accordance with drawing. General positions:
 - i. Extra large baskets
 - 1. inboard side of hoops (attachment side) aligns to OUTSIDE of rim
 - 2. outboard side of hoops (handle side) aligns to INSIDE of rim
 - 3. forward and aft hoops align to INSIDE of rim
 - ii. All other baskets
 - 1. inboard side of hoops (attachment side) aligns to INSIDE of rim
 - 2. outboard side of hoops (handle side) aligns to INSIDE of rim
 - 3. forward and aft hoops align to INSIDE of rim, except R44

5. TIG weld frame to rim assembly.

- a. Ensure lug locating jig and hoop locating jigs are in place. Jigs must remain in place for as long as practical during welding.
- b. Strut tubes and front end cutout (see step 4.f. and g.) must be welded in place after the hoops are welded to the rim. Jig(s) must be in place prior to welding strut tubes.
- c. Robinson R44 (90611) requires fitting and welding of forward end after remainder of basket frame is welded. Use jig to support front hoop.
- d. Record welding rod PO on attached material list.

6. Inspection

- a. Frame assembly for complete welds.

7. Mesh assembly.

- a. Pull sheet of expanded mesh from stock. Record material PO on attached material list.
- b. Cut mesh to size for body.
- c. Remove surface rust with scotch-brite.
- d. Bend body mesh – use table with bend markings on top. Lock wheels on table.
 - i. For extra wide baskets only –
 - 1. Set $\frac{3}{4}$ " angle along edge of table under mesh sheet. Set 1.5" square tube on top of mesh aligned with angle on edge of table. Clamp in place with 6" C-clamps.
 - 2. Bend upper edge of sheet just past a cell intersection to make a flange 2.5" - 3.25" wide. Closer to 2.5" is preferred, full cell intersection on flange side at bend is required.
 - 3. Bend down by hand as far as possible, then use a hammer to flatten the bend tight against the angle on the edge of the table.
 - ii. Using markings on table, align sheet to indicated edge.
 - iii. Using markings on table, align 3" tube to required position and clamp tube in place.
 - iv. Bend mesh by hand tightly over tube along length of tube.
 - v. Keeping mesh in place, un-clamp 3" tube, move to other position and clamp tube in place.
 - vi. Bend mesh by hand tightly over tube along length of tube.
- e. Install attachment lug jig onto basket frame.

- f. Ensure end struts are welded in basket frame if required by the drawing.
- g. Insert mesh into basket.
 - i. General
 - 1. Some cells may interfere with correct positioning, especially at the upper corners and around struts. Bend cell(s) in as required, do not cut cells off.
 - 2. Ideally welds will be located on mesh intersections. Shift mesh if possible to minimize welds located off mesh intersections.
 - 3. Ensure mesh reaches all edges of basket BEFORE trimming. Regardless of progress in clamping, remove clamps and shift mesh if required.
 - 4. Ensure cleco clamps are placed from the inside of the basket to allow removal during welding. Cleco clamps may be used from the outside during fitting, but must be removed prior to welding.
 - ii. Extra large baskets only – seat corner of mesh with flange into inboard upper corner of frame. Use C-clamps on edge of flange as required to maintain tight fit.
 - iii. Starting at inboard top edge of basket, clamp mesh to hoop near top rim using cleco clamps onto hoops. For regular size baskets, edge of mesh should sit approximately half way up rim tube.
 - iv. Working down the inboard side, clamp mesh to hoops with cleco clamps. Clamp down into radius of hoop and continue clamping as required to maintain tight fit in corner of hoop. After the corners are tight, two clamps just onto the radius on both ends should be sufficient to hold the corner tight, remove all extra clamps.
 - v. Clamp mesh to spine in at least 1 place per section.
 - vi. Working up the outboard side, clamp the mesh into the radius of hoop and continue clamping as required to maintain tight fit in corner of hoop. After the corners are tight, 2 clamps just onto the radius on both ends should be sufficient to hold the corner tight, remove all extra clamps.
 - vii. Trim upper outboard edge of mesh if required, edge of mesh must be low enough on rim tube to prevent the weld from protruding above the edge of the rim. Some sheets are tapered and may require ½ to 1 cell to be removed over some or all of the length of the basket. De-burr cut edges with a sanding disc on a die-grinder. Straighten cut cells with duck-bill pliers. Clamp mesh near upper edge to hoops with cleco clamps after trimming.
 - viii. Trim ends to land on hoops, at mesh intersections if possible.
- h. Cut mesh to fit ends. Record material PO on attached material list.
 - i. Remove surface rust with scotch-brite.
 - ii. Ensure mesh is cut at intersections where possible.
 - iii. Bend top edge of mesh 1/8"-3/16" down at 45 degrees
 - iv. Cut for front end cutout if required.
- i. 90611 (R44) only: Cut mesh to fit upper forward end. Record material PO on attached material list.
 - i. Remove surface rust with scotch-brite.
 - ii. Ensure mesh is cut at intersections where possible.
 - iii. Bend top edge of mesh 1/4" down at 60 degrees.
 - iv. Fit mesh to front end of basket.

CARGO BASKET BODY FABRICATION - COMMON

Complete

(initial or SCA #)

8. Weld mesh to frame assembly per drawing.

- a. Ensure lug locating jig is in place prior to welding.
- b. General welding requirements for all baskets, MIG welding:
 - i. Every intersection at top edges.
 - ii. Every intersection at ends.
 - iii. First 5 intersections down on hoops, then every second intersection.
 - iv. Every intersection along spine.
 - v. Extra large baskets – every intersection along corner.
 - vi. Every intersection around ends
 - vii. Every intersection along struts (if applicable)
- c. Bend and trim cells bent in to fit mesh as required and weld in position.
- d. Grind high spots off body mesh welds on ends before welding end mesh.
- e. 90611 (R44) only – weld lid prop bushing (step 9) into rim BEFORE welding upper mesh on forward end of basket assembly.
- f. Record welding rod PO on attached material list.

9. Weld basket components

- a. TIG weld lid prop bushing(s), one or two per drawing.
 - i. Record welding rod PO on attached material list.
 - ii. Record lip prop bushing WO on attached material list.
- b. TIG weld caps to close top of 1" hoops as applicable.
- c. 94611 (Bell206L/407 XL ski) only: cut rim over cross tube gap.
 - i. Cut inboard rim on aft end. Grind flush with hoops.
 - ii. TIG weld caps on open tubes.
 - iii. Record cap material PO on attached material list.
- d. 95911 (Bell 429) only: placard bracket to forward upper corner of basket.
 - i. Record welding rod PO on attached material list.
 - ii. Record placard bracket WO on attached material list.

10. Clean up

- a. Grind high spots off mesh welds.
- b. Tighten mesh using special pliers. Tighten enough to remove "oil canning", where mesh springs in or out. Do not tighten in corners of hoops, mesh will be deformed.
- c. Drill #9 through lid prop bushing(s). De-burr hole(s).
- d. Remove surface rust with scotch-brite pad.

11. Final Inspection

To be completed by a different person than the previous steps.

- a. Basket body assembly for complete welds, and required minimum mesh weld locations.
- b. Filled vent holes – usually on hoops
- c. Overall condition and conformity to drawing(s).
 - i. Hoops for height.
 - ii. Rim for width and length and alignment.
 - iii. Lid prop lugs in correct ends.
 - iv. Fore/aft strut in hoop if required by drawing.
- d. Material lists complete.

CARGO BASKET BODY FABRICATION - COMMON

Complete
(initial or SCA #)

- e. Tag complete basket body assembly in preparation for powder coating.

12. Powder Coating

- a. Parts are to be powder coated white in accordance with commercial practices.
- b. Record powder coating PO.
- c. Inspect powder coating on receiving.
- d. Tag basket body assembly and place into stock in preparation for assembly.

AD 73-04 01	AD 73-04 02	AD 73-04 02
	Black	Black
#1	#2	#3
		AD 73-04 01

CARGO BASKET BODY FABRICATION - COMMON

• General

These instructions apply to all cargo basket body assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69811, Revision 3 – Standard Low Mounted Basket

94511, Revision 0 – Extra-Wide Low Mounted Basket

94611, Revision 0 – Extra-Wide Low Mounted Ski Basket

76611, Revision 0 – High Mounted Ski Basket

Options 70404, Revision 2 – Front end cutout – 698

70411, Revision 0 – Front end cutout – 945/946

Eurocopter AS350/AS355 – left or right

77611, Revision 1 – Short Basket

76411, Revision 3 – Medium Basket (left or right)

78411, Revision 2 – Long Basket

94011, Revision 0 – Extra Large (ski) Basket

Options 70406, Revision 2 – Front end cutout – 764/776/784/940

Robinson R44 – left or right

90611, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80211, Revision 0 – Short Basket

80311, Revision 0 – Medium Basket

81111, Revision 0 – Long Basket

Options 70406, Revision 2 – Front end cutout – 802/803/811

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket

95511, Revision 0 – Extra Large (ski) Basket

Options 70407, Revision 1 – Front end cutout – 751

704 , Revision – Front end cutout – 955

MD600

82811, Revision 0 – Standard Basket

Options – Applicable to all models

70403, Revision 5 – Auxiliary Latch

Work Order: 2016-92 x 3 RHMaterial Tracking Sheet
Robinson R44
Basket Body Fabrication

1 of 2

Date Opened: 05 Jan 16
Jul 08

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
			90611-01-	Basket Assembly	(-01 RH, -02 LH)	
Step 1				Rim Assembly	From 2016-91 x 21 DRM	
	. 2		--	3/4" Tube - Long Rim (55 5/8")	4130 Steel, 3/4" x 0.035 Sqr. Tube	17004/15072
	. 2		--	3/4" Tube - Short Rim (22.5")	4130 Steel, 3/4" x 0.035 Sqr. Tube	17004/15072
Step 2				Weld Rim Assembly		
	. A/R		--	Welding Rod	ER70S-2 TIG Rod	16078
Step 3				Inspection - Rim	None	
Step 4				Frame Assembly		
	. 2		49210-02	Hoop - standard	4130 Steel, 1/2" x 0.035 Sqr. Tube	15072 See attached
	. 1		49210-02	Hoop - with handle provisions	4130 Steel, 1/2" x 0.035 Sqr. Tube	15072 See attached
	. 1		90621-01-XX	Aft Attachment hoop	2013-47	15072-08
	. 1		90622-01-XX	Forward Attachmen Hoop	2013-47	15072-08
	. 4		--	1/2" Tube - spine	4130 Steel, 1/2" x 0.035 Sqr. Tube	15072
	. 1		--	1/2" Tube - strut	4130 Steel, 1/2" x 0.035 Sqr. Tube	15072
	. 1		--	1/2" Tube - cross member (21")	4130 Steel, 1/2" x 0.035 Sqr. Tube	15072
Step 5				Weld Frame Assembly		
	. A/R		--	Welding Rod	ER70S-2 TIG Rod	16078
Step 6				Inspection - Frame Assembly	None	
Step 7				Mesh Assembly		
	. 1		--	Mesh (Body - 48" x 56")	3/4-16F Expanded Mild Steel sheet	16038
	. 1		--	Mesh (End - 22" x 15.5")	3/4-16F Expanded Mild Steel sheet	16038
	. 1		--	Mesh (End - 22" x 9")	3/4-16F Expanded Mild Steel sheet	16038
	. 1		--	Mesh (End - 22" x 21")	3/4-16F Expanded Mild Steel sheet	16038

Work Order: 2016-92

Material Tracking Sheet

2 of 2





Robinson R44

Date Opened: July 2016

Basket Body Fabrication

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 8				<i>Weld Mesh</i>		
	A/R		--	Welding Rod	ER70S-6 MIG Wire	15059
Step 9				<i>Weld Basket Components</i>		
Step 9.a.	1		49215-01	Spacer (Lid prop)	304 Stainless Steel, 1/2" Dia.	2015-84
	A/R		--	Welding Rod	ER308L TIG Rod	14028
Step 9.b.	1		--	Cap	1018 Mild Steel, 0.032" Sheet	2019
	A/R		--	Welding Rod	ER70S-2 TIG Rod	16078
Step 10				<i>Clean Up</i>	None	
Step 11				<i>Inspection - Final Assembly</i>	None	
Step 12				Powder Coating		17035

REV	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	TITLE BLOCK UPDATED; 84282 CHANGED TO 84283; WELDING ROD UPDATED; # OF WELDS DOWN BRACE TUBE'S INCREASED; REFERENCE DIMENSIONS ADDED	BJC	21/05/2011

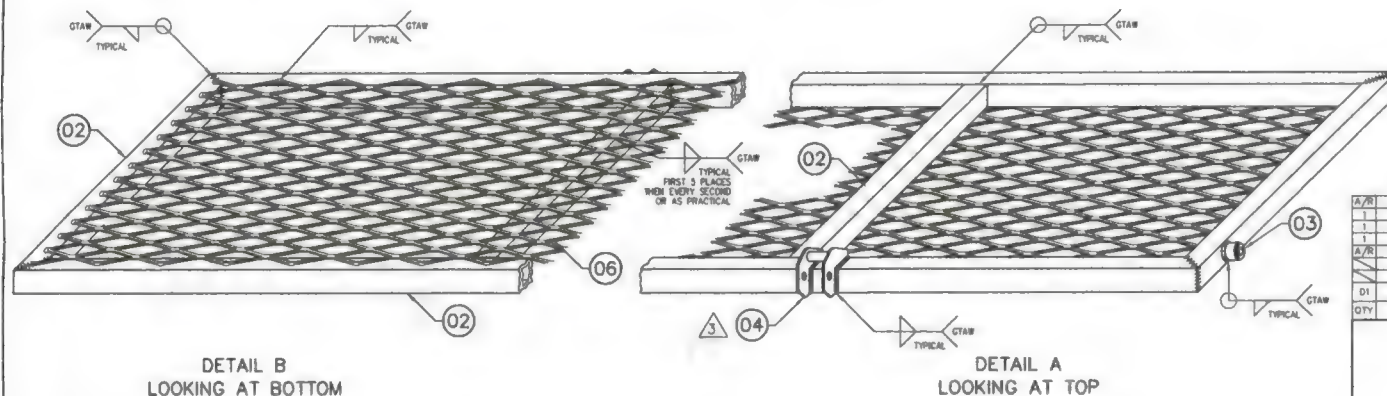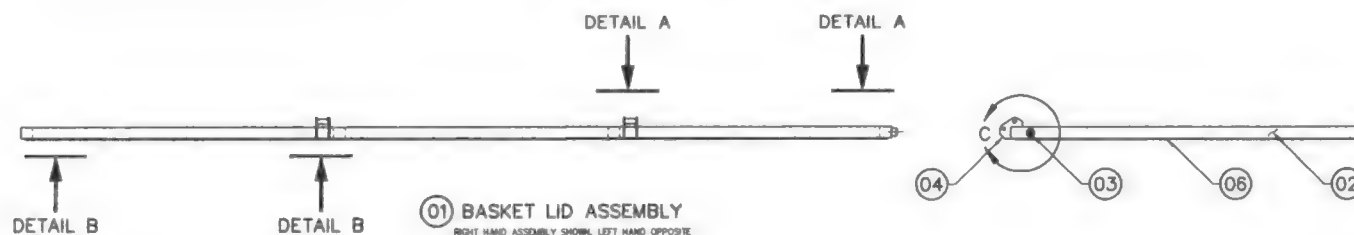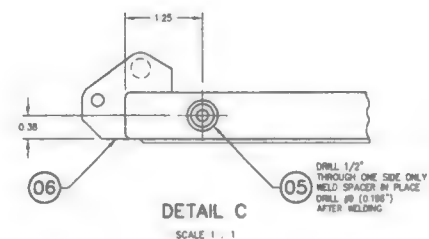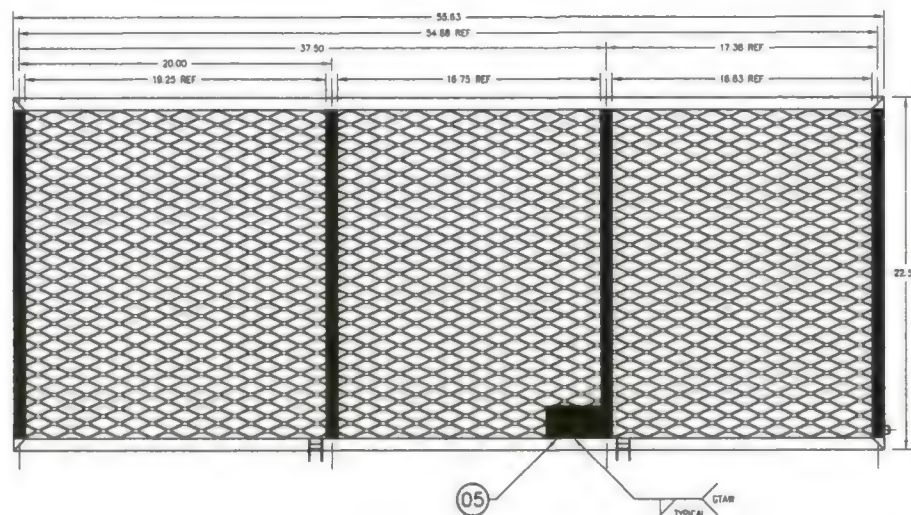

- NOTES:
- 1 REMOVE ALL BURRS AND BREAK SHARP EDGES
 - 2 WELDING OF 4130 STEEL TO BE COMPLETED BY GTAW METHOD TO AWS 268SC 4130 AND 1018 STEEL. WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT
 - 3 STEEL AND 1018 STEEL. WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT.
 - 4 INSTALL ITEM 6 (HANDLE BRACKET ASSEMBLY) IN ACCORDANCE WITH AERO DESIGN LTD. DRAWING 84263
 - 5 WHEN ASSEMBLY IS COMPLETE, FILL ALL VENT Holes WITH ROSETTE WELD
 - 6 THOROUGHLY CLEAN AND POWDER COAT BASKET SUB-ASSEMBLIES PRIOR TO ASSEMBLY

A/R	3/2-18F	08	25M					
	36204-10	05	PLACARD BRACKET					
1	84263-01	04	LID HANDLE PROVISIONS ASSEMBLY					
1	49216-01	03	SPACER					
A/R	--	7/8	TUBE	4130 STEEL COND N	T-6736	0.75 X 0.035 SQR TUBE		
	90812-01-02	01	BASKET LID ASSEMBLY (LEFT HAND)					
	90812-01-01	01	BASKET LID ASSEMBLY (RIGHT HAND)					
D1	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE		
QTY	LIST OF MATERIALS							
APPROVALS DRAWN: JEFF CLARKE D3 SEPT 2010 CHECKED: E BURGON				 AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL. 604-685-5279 www.aerodesignltd.ca				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:				ROBINSON R44, R44 II QUICK RELEASE CARGO BASKET BASKET LID FABRICATION				
DECIMALS ANGLES X.XXX ±0.010 ° ±1/2" X.XX ±0.03 X.X ±0.1				SCALE 1 : 4	DWG NO	DWG NO	REV	
SHEET 1 OF 1				A1	90612		1	

CARGO BASKET LID FABRICATION

Complete
(initial or SCA #)

Work Order: 2016-92

R44 RH x3

Date Open: 05 JULY 2016

1. Rim Assembly – Basket Lid

- Cut and fit $\frac{3}{4}$ " x 0.035 material to fit rim jig, 45 degree ends.
 - 1 or 2 lid prop bushing holes in short tube – refer to drawing
- Record material PO on attached material list.
- Remove writing on tubes with acetone and scotch bright.

AD
73-04
05

AD
73-04
05

AD
73-04
05

2. Weld Rim Assembly

- Record welding rod PO on attached material list.

AD
73-04
05

AD
73-04
05

AD
73-04
05

3. Inspection

- Rim for complete welds

AD
73-04
05

AD
73-04
05

AD
73-04
05

4. Frame assembly – Lid

- General
 - Vent holes shall be #30 (0.129), and located inside the structure wherever possible to allow venting of weld gasses through existing holes (i.e. lid prop bushing)
- Insert rim from step 2 into jig.
- Cut and fit $\frac{3}{4}$ " x 0.035 material, 21" long, for lid cross members.
- Record material PO on attached material list.
- Remove writing on tubes with acetone and scotch bright.
- Drill vent holes into rim to vent cross members into rim.
- Locate cross members in lid rim. Refer to drawing for spacing of cross members. Clamp cross members with C-clamps to jig.

AD
73-04
05

AD
73-04
05

AD
73-04
05

5. Frame assembly – Lid with optional walkway modification

- Fit cross members to rim in accordance with step 4.
- Attach walkway jig with C-clamps. Ensure correct orientation of rim, refer to drawing.
- Cut $\frac{1}{2}$ " x 0.035 material for walkway stringers to fit between lid cross members. Record material PO on attached material list.
- Drill vent holes into cross members at walkway stringers.
- Align walkway stringers on walkway jig using cleco clamps near both ends of each stringer, and clamp stringer to jig using a C-clamp in the centre.

NA

NA

NA

6. Weld frame assembly.

- Record welding rod PO on attached material list.
- Jigs must remain in place for as long as practical during welding.

AD
73-04
05

AD
73-04
05

AD
73-04
05

7. Inspection

- Frame assembly for complete welds.

AD
73-04
05

AD
73-04
05

AD
73-04
05

CARGO BASKET LID FABRICATION

AD
73-04
07

AD
73-04
07

Complete
(initial or SCA #)
AD
73-04
07

8. Mesh assembly.

Note: 95912 (Bell 429) does not have mesh. Skip to step 10.

- Pull sheet of expanded mesh from stock. Record material PO on attached material list.
- Cut mesh to size for lid.
- Remove surface rust with scotch-brite.
- Ensure lid is prepared for mesh on the correct side.

9. Weld mesh to frame assembly per drawing.

- General welding requirements for all lids:
 - Every intersection on all edges.
 - First 5 intersections along cross members, then every second intersection.
- MIG weld both short sides.
- Clamp lid over spacer at centre of lid to pre-tension mesh.
 - $\frac{3}{4}$ " for lids under 76"
 - 1" (check) for lids over 76"
- Weld remainder of mesh as indicated in a.
- Record welding rod PO on attached material list.

10. Weld lid components.

- Handle brackets, locate in accordance with drawing.
 - Standard location: $\frac{1}{4}$ " outside of last cross member on both ends.
 - Record handle bracket WO and welding rod PO on attached material list.
- Lid prop bushing(s).
 - one or two in accordance with drawing.
 - Record lip prop bushing WO and welding rod PO on attached material list.
- Placard bracket. – not installed on 95912 (Bell 429)
 - Locate on cross member to set bracket in centre bay of lid.
 - Record placard bracket WO and welding rod PO on attached material list.

11. Clean up

- Grind high spots off mesh welds.
- Tighten mesh using special pliers. Tighten enough to remove "oil canning", where mesh springs in or out.
- Straighten lid using frame attached under welding table. Work carefully, avoid excessive force to prevent kinking rim tubes.
- Drill #9 through lid prop bushing(s). De-burr hole(s).
- Drill for lid bumpers using $\frac{1}{4}$ " (#3) centre drill.
 - 3 places for lids under 76"
 - 4 places for lids over 76"
- Remove surface rust with scotch-brite pad.

12. Final Inspection

To be completed by a different person than the previous steps.

- Basket lid assembly for complete welds, and required minimum mesh weld locations.
- Material lists complete.
- Overall condition and conformity to drawing(s).

CARGO BASKET LID FABRICATION

Complete
(initial or SCA #)

13. Powder Coating

- Parts are to be powder coated white in accordance with commercial practices.
- Record powder coating PO.
- Inspect powder coating on receiving.
- Tag lid assembly and place into stock in preparation for assembly.

AD 73-04 02	AD 73-04 02	AD 73-04 02
#1	#2	#3
		Black.

CARGO BASKET LID FABRICATION - COMMON

General

These instructions apply to all cargo basket lid assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69812, Revision 3 – Standard Low Mounted Basket; Extra-Wide Low Mounted Basket

94612, Revision 0 – Extra-Wide Low Mounted Ski Basket

76612, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77612, Revision 1 – Short Basket

69812, Revision 3 – Medium Basket (left and right)

78412, Revision 2 – Long Basket

94012, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90612, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80212, Revision 0 – Short Basket

80312, Revision 0 – Medium Basket

81112, Revision 0 – Long Basket

Bell 429 – right or left

95912, Revision 0 – Standard Basket

Bell Medium – left or right

75112, Revision 0 – Standard Basket

95512, Revision 0 – Extra Large (ski) Basket

MD600

82812, Revision 0 – Standard Basket

Options

70405, Revision 3 – Walkway

70402, Revision 1 – Lid Door

Work Order: 2016-92

Material Tracking Sheet

1 of 2

Date Opened: 05 JULY 2016

Robinson R44

Lid Fabrication

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
	3		90612-01- 01	Lid Assembly	(-01 RH, -02 LH)	
Step 1				Rim Assembly		
	. 2		--	3/4" Tube - Long Rim (55 5/8")	4130 Steel, 3/4" x 0.035 Sqr. Tube	17004
	. 2		--	3/4" Tube - Short Rim (22.5")	4130 Steel, 3/4" x 0.035 Sqr. Tube	17004
Step 2				Weld Rim Assembly		
	. A/R		--	Welding Rod	ER70S-2 TIG Rod	14033/16078
Step 3				Inspection - Rim	None	
Step 4				Frame Assembly		
	. 2		--	3/4" Tube - Cross Member (21")	4130 Steel, 3/4" x 0.035 Sqr. Tube	17004
Step 6				Weld Frame Assembly		
	. A/R		--	Welding Rod	ER70S-2 TIG Rod	14033/16078
Step 7				Inspection - Frame Assembly	None	
Step 8				Mesh Assembly		
	. 1		--	Mesh (lid - 55" x 22")	3/4-16F Expanded Mild Steel sheet	16038
Step 9				Weld Mesh		
	. A/R		--	Welding Rod	ER70S-6 MIG Wire	15059

Work Order: 2016-92

Material Tracking Sheet

2 of 2

Date Opened: 05 JUL 2016



Robinson R44

Lid Fabrication

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 10				<i>Weld Lid Components</i>		
	. 1	84262	84262-01	Upper Handle Bracket Assembly		2016-147
	. . 4		36273-01	Lid Bracket	321 Stainless, 0.050 Sheet	
	. . 2		36275-02	Support	304 Stainless, 5/16" Rod	
	. A/R		--	Welding Rod	ER308L TIG Rod	14028
	. 1		49216-01	Spacer (Lid prop)	304 Stainless, 1/2" Dia.	2015-84
	. A/R		--	Welding Rod	ER308L TIG Rod	14028
	. 1		36204-10	Placard Bracket	1018 Steel, 0.035" Sheet	2016-119
	. A/R		--	Welding Rod	ER70S-2 TIG Rod	16078
Step 11				<i>Clean Up</i>	None	
Step 12				<i>Inspection - Final Assembly</i>	None	
Step 13				<i>Powder Coating</i>		17035

2016-92 x3

LIST OF MATERIALS					
PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC.	STOCK SIZE
49210-01	01	END HOOP	4130 SQUARE TUBING	MIL-T-6736	#1/2" x 0.035 WALL
49210-02	02	HOOP	4130 SQUARE TUBING	MIL-T-6736	#1/2" x 0.035 WALL

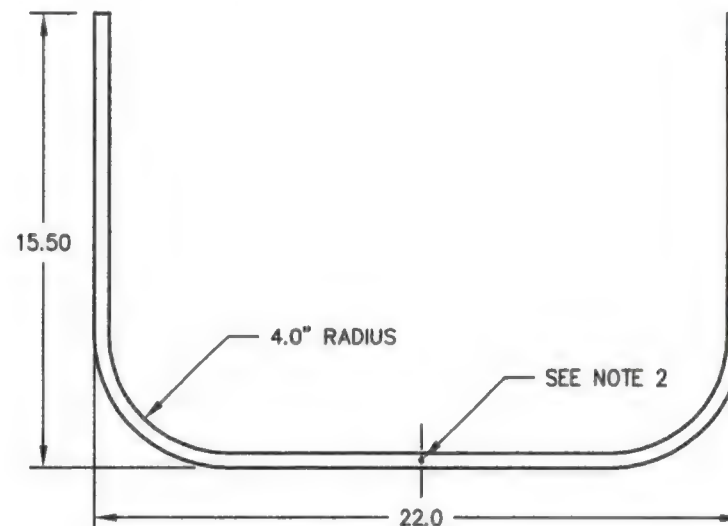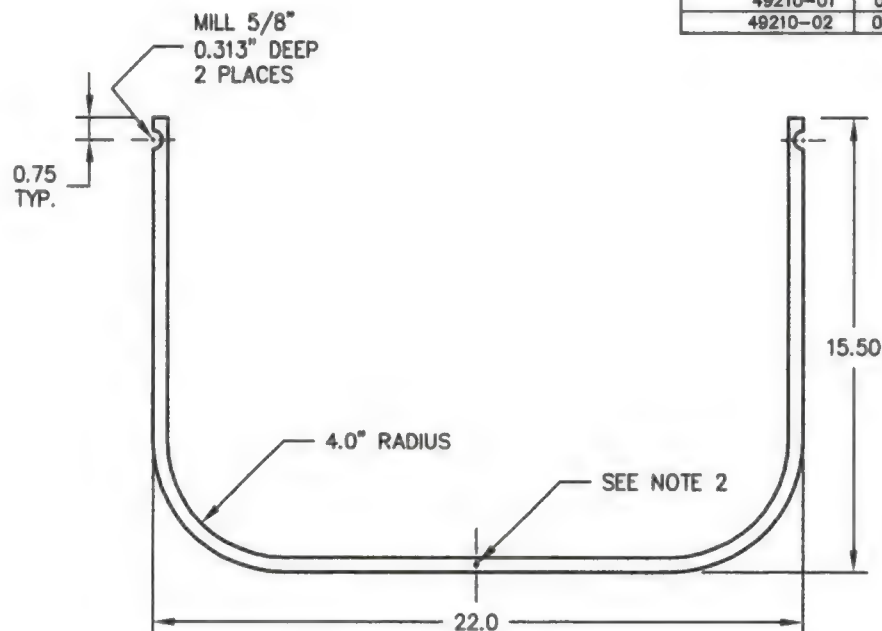

NOTES:

1. REMOVE ALL BURRS AND SHARP EDGES.
2. DRILL #30 (0.129) VENT HOLE IN BOTTOM OF HOOPS FOR VENTING WELD GASES.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
2	TITLE BLOCK UPDATED; VENT HOLE CHANGED	BJC	22/05/2014
1	HOOP HEIGHT CHANGED	BJC	APR 28/04

NOTICE

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

APPROVALS	DATE
DRAWN: STEVEN FAHEY	MAY 10/02
CHECKED: E. BURGON	MAY 10/02



AERO DESIGN LTD.

9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G5
TEL: 804.483.2376 www.aerodesign.ca

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ±0.010 ±1/2°
X.XX ±0.03
X.X ±0.1

**HELICOPTER CARGO BASKET
BASKET COMPONENTS - HOOPS**

SCALE 1 : 5	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	LGL	49210	2



Aero Design Ltd.

AMF 73-04

9888 A Malaspina Rd.

Powell River, BC

Canada

V8A 0G3

Complete Fabrication Instructions

This sheet is designed to assist in the fabrication of Aero Design products in accordance with the company Manufacturing Policy Manual, the Canadian Aviation Regulations and other applicable technical documentation.

#####

262

Nomenclature: AS350 Quick Release Cargo Basket Hoop Work Order #: _____

Number of Units: 6

Model	Requirements	Reference	Initial					
AS350	Review LOEP to ensure most current technical specifications	N/A	DB	DB	DB	DB	DB	DB
AS350	Cut a piece of material to 48 3/16" 90° ends 48 1/8" DB	N/A	DB	DB	DB	DB	DB	DB
AS350	Cut one end at 90 degrees and the opposite end at 16 degrees.	N/A						
AS350	At the 90 degree end measure 12.5 10 13/16 DB and mark. Bend at that mark, set stop at 103 deg. 10.875 DB both ends	N/A	DB	DB	DB	DB	DB	DB
AS350	At the longest point of the 16 degree end measure 14 1/4" and mark. Bend at that mark, set stop at 85 deg.	N/A						

Post Fabrication Inspection

Inspect components to ensure conformity to the applicable design data.

Signature: [Signature]

Licence Number or SCA: AD02

Date: 29 MAR 2017

↑ IS THIS NEEDED? JK.

CARGO BASKET HOOP FABRICATION - 84262

General

These instructions apply to all cargo basket hoops that require handle bracket provisions. Refer to the following drawings, at the current revision, for dimensions and details:

Handle Provisions – Common to all baskets
84262, Revision 1 – Handle Bracket Assembly

Work Order: 2016-92

Date Open: 05 JULY 2016

Complete

(initial or SCA #)

AD
73-04
07

AD
73-04
07

AD
73-04
07

1. Handle Bushings – Preparation – 84262-01

Required in locations where handle brackets will be installed.

- Start with stock hoop or half hoop as required for specific basket assembly.
- Setup manual milling machine with specific hoop vise jaw. Set XY 0 on far, right edge of jaw (end of hoop).
- Drill 2 places, 5/16" (0.313) holes using 5/16 (#4) centre drill through both sides in accordance with drawing. Apply a few drops of Rapid-Tap cutting oil to each location before drilling.
 - locate 0.23" from edge (within tolerance specified on drawing).
- Wipe or blow off cutting oil and de-burr with scotch-brite disc on die-grinder.
- Tag in process hoop(s) and place into stock.

AD
73-04
05

AD
73-04
05

AD
73-04
05

2. Handle Bushings – Welding – 84262-01

- Insert 84271-01 bushings into hoop prepared in step 2. above.
- TIG weld bushing both sides, 2 bushings per hoop.
- Record bushing and welding rod PO/WO on attached material list.
- Tag in process hoop(s) and place into stock.

AD
73-04
07

AD
73-04
07

AD
73-04
07

3. Handle Bushings – Finish – 84262-01

- De-burr welded bushings.
- Inspect hoop for conformity to drawing.
- Tag complete and inspected hoop(s) and place into stock.

Work Order: 2016-92

Material Tracking Sheet
Robinson R44
Hoops Fabrication

1 of 2

Date Opened: 05 JULY 2016

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 1	<u>6</u>		49210-02	Hoop - standard	4130 Steel, 1/2" x 0.035 Sqr. Tube	15070
Step 1	<u>3</u>		49210-02	Hoop - with handle provisions	4130 Steel, 1/2" x 0.035 Sqr. Tube	15070
Step 2				Welding		
	. 2	84262	84272-01	Bushing	4130 Steel, 5/16" x 0.058 Rnd. Tube	2016-134
	. A/R		--	Welding Rod	ER70S-2	14005
Step 3				Inspection	None	
Step 1	3	N/A OB	90622-01- <u>01</u>	Hoop - attachment	(-01 RH, -02 LH)	
	. 1		--	1/2" Tube - hoop	4130 Steel, 1/2" x 0.035 Sqr. Tube	15070 OB
Step 2				Welding		
	. 2		69823-02	Lug	1018 Steel, 5/8" Rod	
	. A/R		--	Welding Rod	ER70S-2	
Step 3				Finishing and Inspection	None	

Work Order: 2016-92

Material Tracking Sheet

2 of 2


Robinson R44

Date Opened: 05 JUL 2016


Hoops Fabrication

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
	0.3	N/A	90621-01-01	Hoop - attachment (aft)	(-01 RH, -02 LH)	
Step 1				1/2 Hoop Fabrication - 1/2" hoop		
	. 1		--	1/2" Tube - hoop	4130 Steel, 1/2" x 0.035 Sqr. Tube	
Step 2				Machining	None	
Step 3				1/2 Hoop Fabrication - 1" hoop		
	. 1		--	1" tube - hoop	4130 Steel, 1" x 0.065 Sqr. Tube	
Step 4				Machining	None	
Step 5				Joint Preparation	None	
				Welding		
Step 6	. 2		90621-05	Lug	1018 Mild Steel, 5/8" Dia.	
Step 7	. 2	84262	84272-01	Bushing	4130 Steel, 5/16" x 0.058 Rnd. Tube	2016-134 DB
Step 8	. 1		76423-04	Cap	1018 Mild Steel, 0.050" Sheet	2019 DB
	. A/R		--	Welding Rod	ER70S-2	14005 DB
Step 9				Finishing and Inspection	None	

2016-92 x3 N/A-STOCK JK.

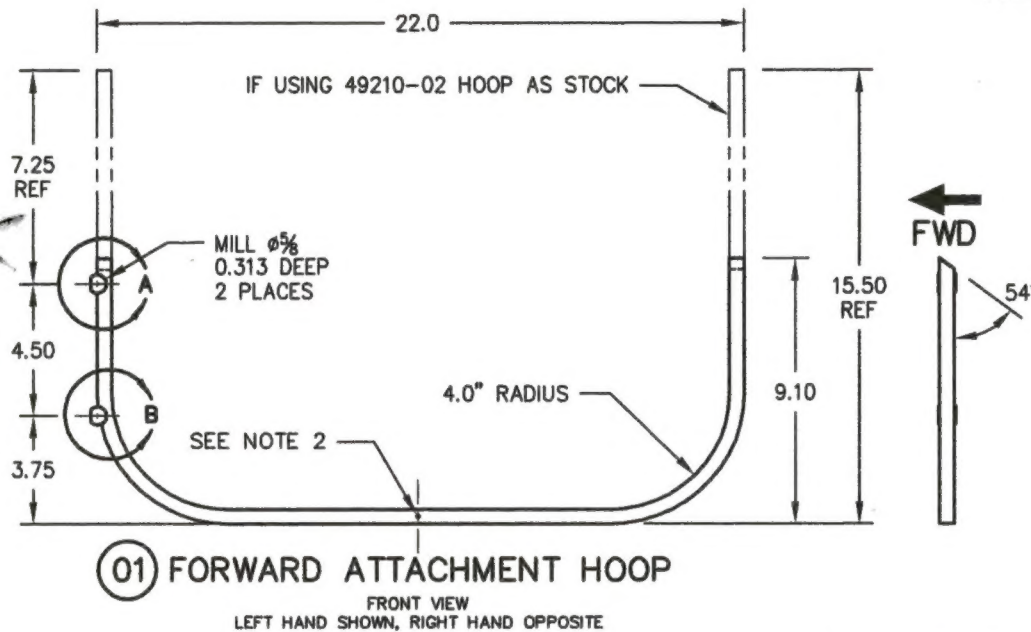

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	TITLE BLOCK UPDATED, HEIGHT UPDATED TO MATCH ASSEMBLY DRAWING	BJC	22/05/2014

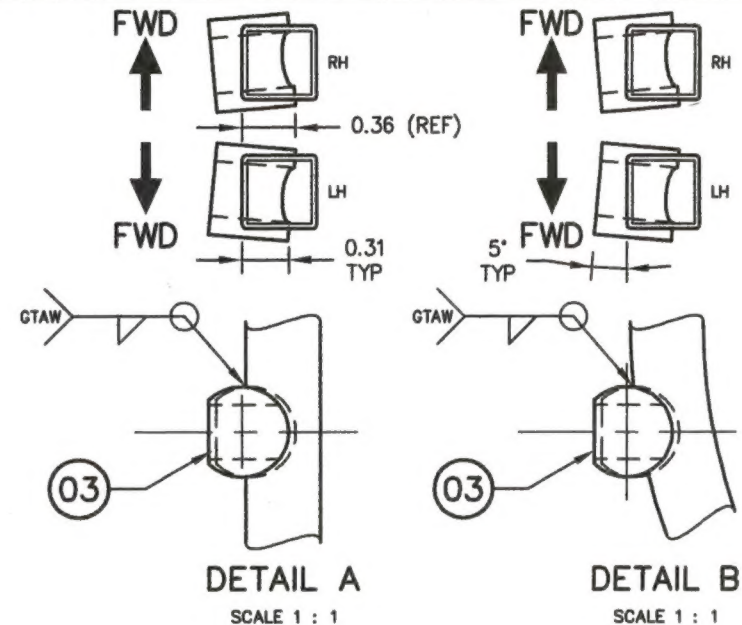

NOTES

1. REMOVE ALL BURRS AND BREAK SHARP EDGES.
2. DRILL #30 (0.129) VENT HOLE IN BOTTOM OF HOOP FOR VENTING OF WELD GASES.
3. WELDING OF STEEL LUGS TO BE COMPLETED BY GTAW METHOD TO AMS2685C. WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT.


QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
2	69823-02	03	LUG			
	90622-01-02	01	LH FWD ATTACHMENT HOOP	4130 STEEL COND. N	MIL-T-6736	1/2 x 0.035 SQR. TUBE
	90622-01-01	01	RH FWD ATTACHMENT HOOP	4130 STEEL COND. N	MIL-T-6736	1/2 x 0.035 SQR. TUBE

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECEPT AGREEES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.	APPROVALS		DATE		AERO DESIGN LTD. CONSULTING ENGINEERS, TRANSPORT CANADA APPROVALS, DAR 290M 2013 - 39TH AVENUE N.E., CALGARY, ALBERTA, CANADA, T2E 6R7 tel: (403) 250-8027 fax: (403) 250-8333 aerodesign@telusplanet.net				
	DRAWN: JEFF CLARKE		10 APR 2006						
	CHECKED: E. BURGAIN								
	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2° X.XX ±0.03 X.X ±0.1		ROBINSON R44, R44 II QUICK RELEASE CARGO BASKET FORWARD ATTACHMENT HOOP FABRICATION						
NOTICE		SCALE 1 : 5		DWG. SIZE		DWG. NO.		REV.	
		SHEET 1 OF 1		LGL		90622		1	

NOTICE
THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DULICATED IN ANY MANNER NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREIN.

2016-92 x3 N/A - STOCK JK

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
Q	INITIAL ISSUE		
1	TITLE BLOCK UPDATED; HANDLE PROVISIONS ADDED; CAP P/N UPDATED	BJC	28/05/2014

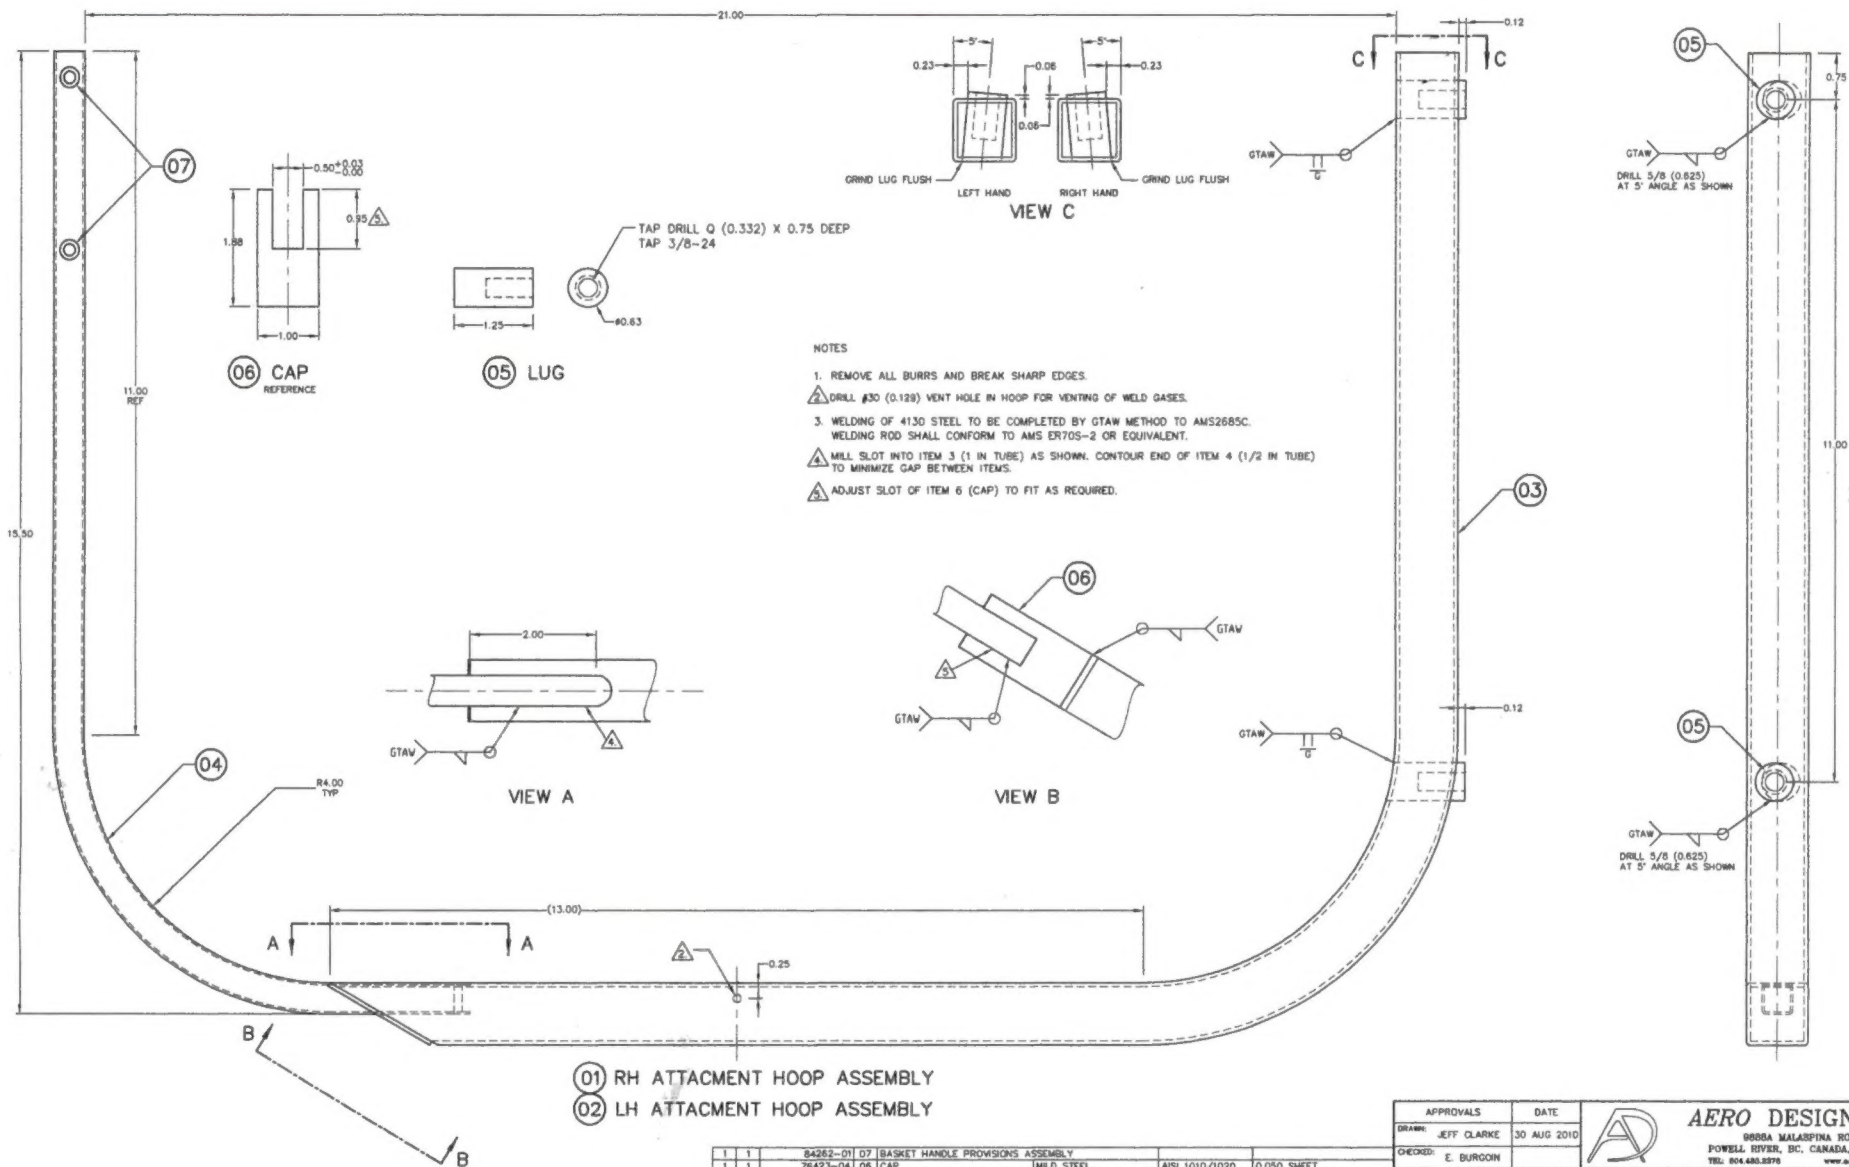

NOTES

1. REMOVE ALL BURRS AND BREAK SHARP EDGES.
2. DRILL #30 (0.125) VENT HOLE IN HOOP FOR VENTING OF WELD GASES.
3. WELDING OF 4130 STEEL TO BE COMPLETED BY GTAW METHOD TO AMS2685C. WELDING ROD SHALL CONFORM TO AMS E70S-2 OR EQUIVALENT.
4. MILL SLOT INTO ITEM 3 (1 IN TUBE) AS SHOWN. CONTOUR END OF ITEM 4 (1/2 IN TUBE) TO MINIMIZE GAP BETWEEN ITEMS.
5. ADJUST SLOT OF ITEM 6 (CAP) TO FIT AS REQUIRED.

- 01 RH ATTACHMENT HOOP ASSEMBLY
02 LH ATTACHMENT HOOP ASSEMBLY

QTY	QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
1	1	84262-01	07	BASKET HANDLE PROVISIONS ASSEMBLY	MILD STEEL	AMS 1010/1020	0.050 SHEET
1	1	76423-04	05	CAP	MILD STEEL	AMS 1010/1020	5/8 DIA ROD
2	2	90621-04	05	LUG	4130 STEEL COND. N	MIL-T-8736	1/2 X 0.035 SQR TUBE
A/R	A/R	04	TUBE 1/2IN	4130 STEEL COND. N	MIL-T-8736	1 X 0.065 SQR TUBE	
A/R	A/R	03	TUBE 1IN	4130 STEEL COND. N	MIL-T-8736	1 X 0.065 SQR TUBE	
1	1	90621-01-02	02	LH AFT ATTACHMENT HOOP ASSEMBLY			
1	1	90621-01-01	01	RH AFT ATTACHMENT HOOP ASSEMBLY			

APPROVALS	DATE	
DRAWN: JEFF CLARKE	30 AUG 2010	
CHECKED: E BURGOIN		
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON:		
DECIMALS	ANGLES	
X.XX ±0.010	±1/2°	
X.XX ±0.03		
X.X ±0.1		
SCALE 1:1	DWG SIZE	DWG NO.
SHEET 1 OF 1	A1	90621
		1

AERO DESIGN LTD.
9080A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 804.480.8870 www.aerodesign.ca

ROBINSON R44
QUICK RELEASE CARGO BASKET
AFT ATTACHMENT HOOP FABRICATION